

2015

# Installation av mediaomvandlare

Östrabräcke fiber

Denna anvisning är framtagen för att underlätta installation







Figur 1.Skruva fast vägg fästet med 4 skruva



Figur 2. Fiberanslutnings box in sida hus vägguttag

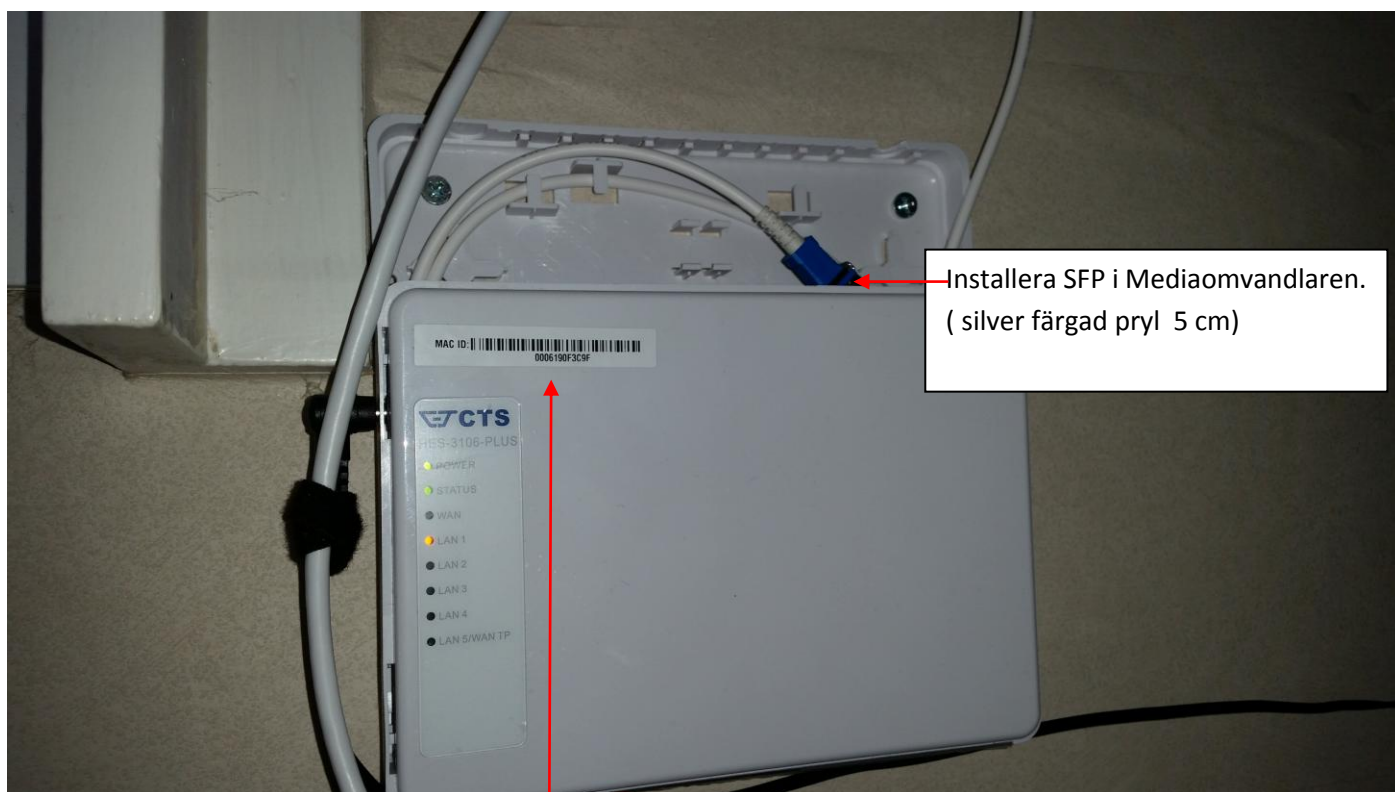

Figur 3 Media omvandlare glöm ej att klistra på Mac id

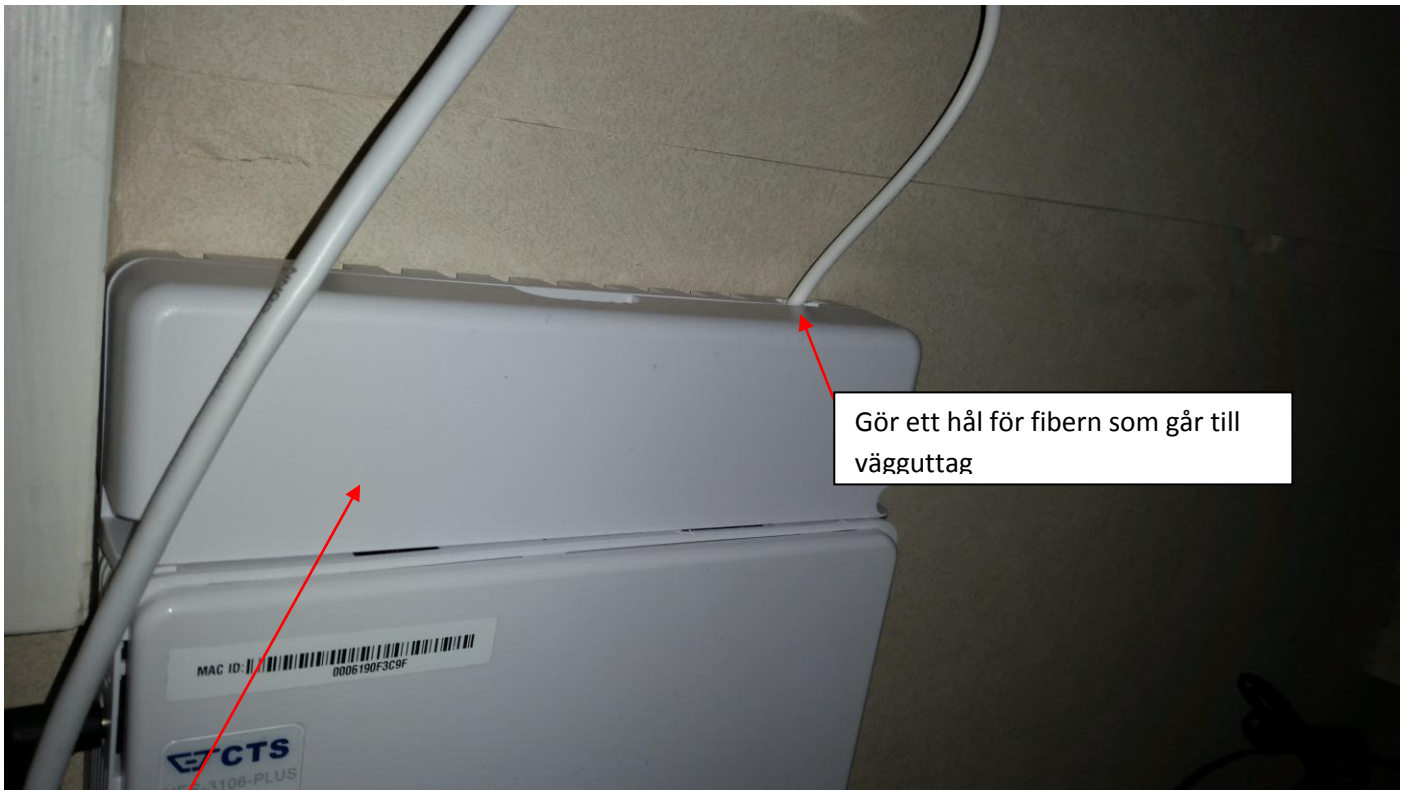

Figur 4 Skyddslock

## Installations anvisning

# Installation Guide

### Device & Cable Tray Base

**Front and Rear View**

**Top View of Cable Tray Base**

### Cable Tray Base Enhancement

**Enhancement 1: U-shaped Fiber Cable Input Hole**  
There are 5 undrilled U-shaped Fiber Cable Input Holes reserved for flexible fiber installation. To use these holes for fiber installation, first use a mini hand drill to drill U-shaped holes as pre-outlined in the Cable Tray Base.

**Enhancement 2: Cable Fixture Hole**  
There are 4 Cable Fixture Holes provided to fix the cable with outer jacket firmly in the Cable Tray Base using a strap or plastic tie.

**Enhancement 3: Wall-Mounting Screw Hole**  
Once the Cable Tray Base is hung on the wall, use 4 screws to fix it on the wall firmly. After using these holes, the Cable Tray Base is not movable anymore.

### Optical Fiber Installation

**A** Arrange fiber cable into the Fiber Cable Tray Base

**Method 1:** Use the centered Fiber Cable Input Hole to install fiber cable. Make sure fiber cable is installed in a clockwise direction.

**Method 2:** Use U-shaped Fiber Cable Input Hole to install fiber cable. Make sure fiber cable is installed in a clockwise direction.

**B** Connect fiber cable with connectors to the fiber cable transceiver in the Device.

### Wall-Mounting Installation

**A** Screw two bolts into the wall.

**B** Hang the Cable Tray Base on the wall.

**Horizontal Direction:** 13.4cm or 5.27inch

**Vertical Direction:** 10cm or 3.94inch

**C** Use screws to fix the Cable Tray Base firmly on the wall.

**NOTE:** Screws are not provided.

### Assembly

**A** Put the Device and the Cable Tray Base together.

**B** Push the Device forward to lock it with the Base.

**C** Put the Cable Tray Protective Case back to the Base.

**D** Make sure the Device, Base and Protective Case are securely locked together.

### Connection

Connect RJ-45 UTP cable

Connect the power

Thread a plastic tie through the locking hole and tighten it.

**NOTE:** Use the locking hole on the left and right side of the Cable Tray Base to protect the Device from unauthorized uses.

13.4cm or 5.27inch

Version: 1.0